


STEP 1:

MOUNT SHELF BRACKETS TO THE WALL IN DESIRED LOCATION. ENSURE THE BRACKETS ARE MOUNTED LEVEL AS THE STORAGE SHELF IS MOUNTED ON TOP OF THE BRACKETS. BRACKET MOUNTING HARDWARE NOT INCLUDED.



STEP 2:

PLACE SHELF ON TOP OF BRACKETS WITH LONG DOUBLE WIRES DOWN AS SHOWN. INSERT 1/4-20 X 2" BOLTS WITH WASHERS THROUGH THE TWO WIRES AND THROUGH THE BRACKETS AS SHOWN.

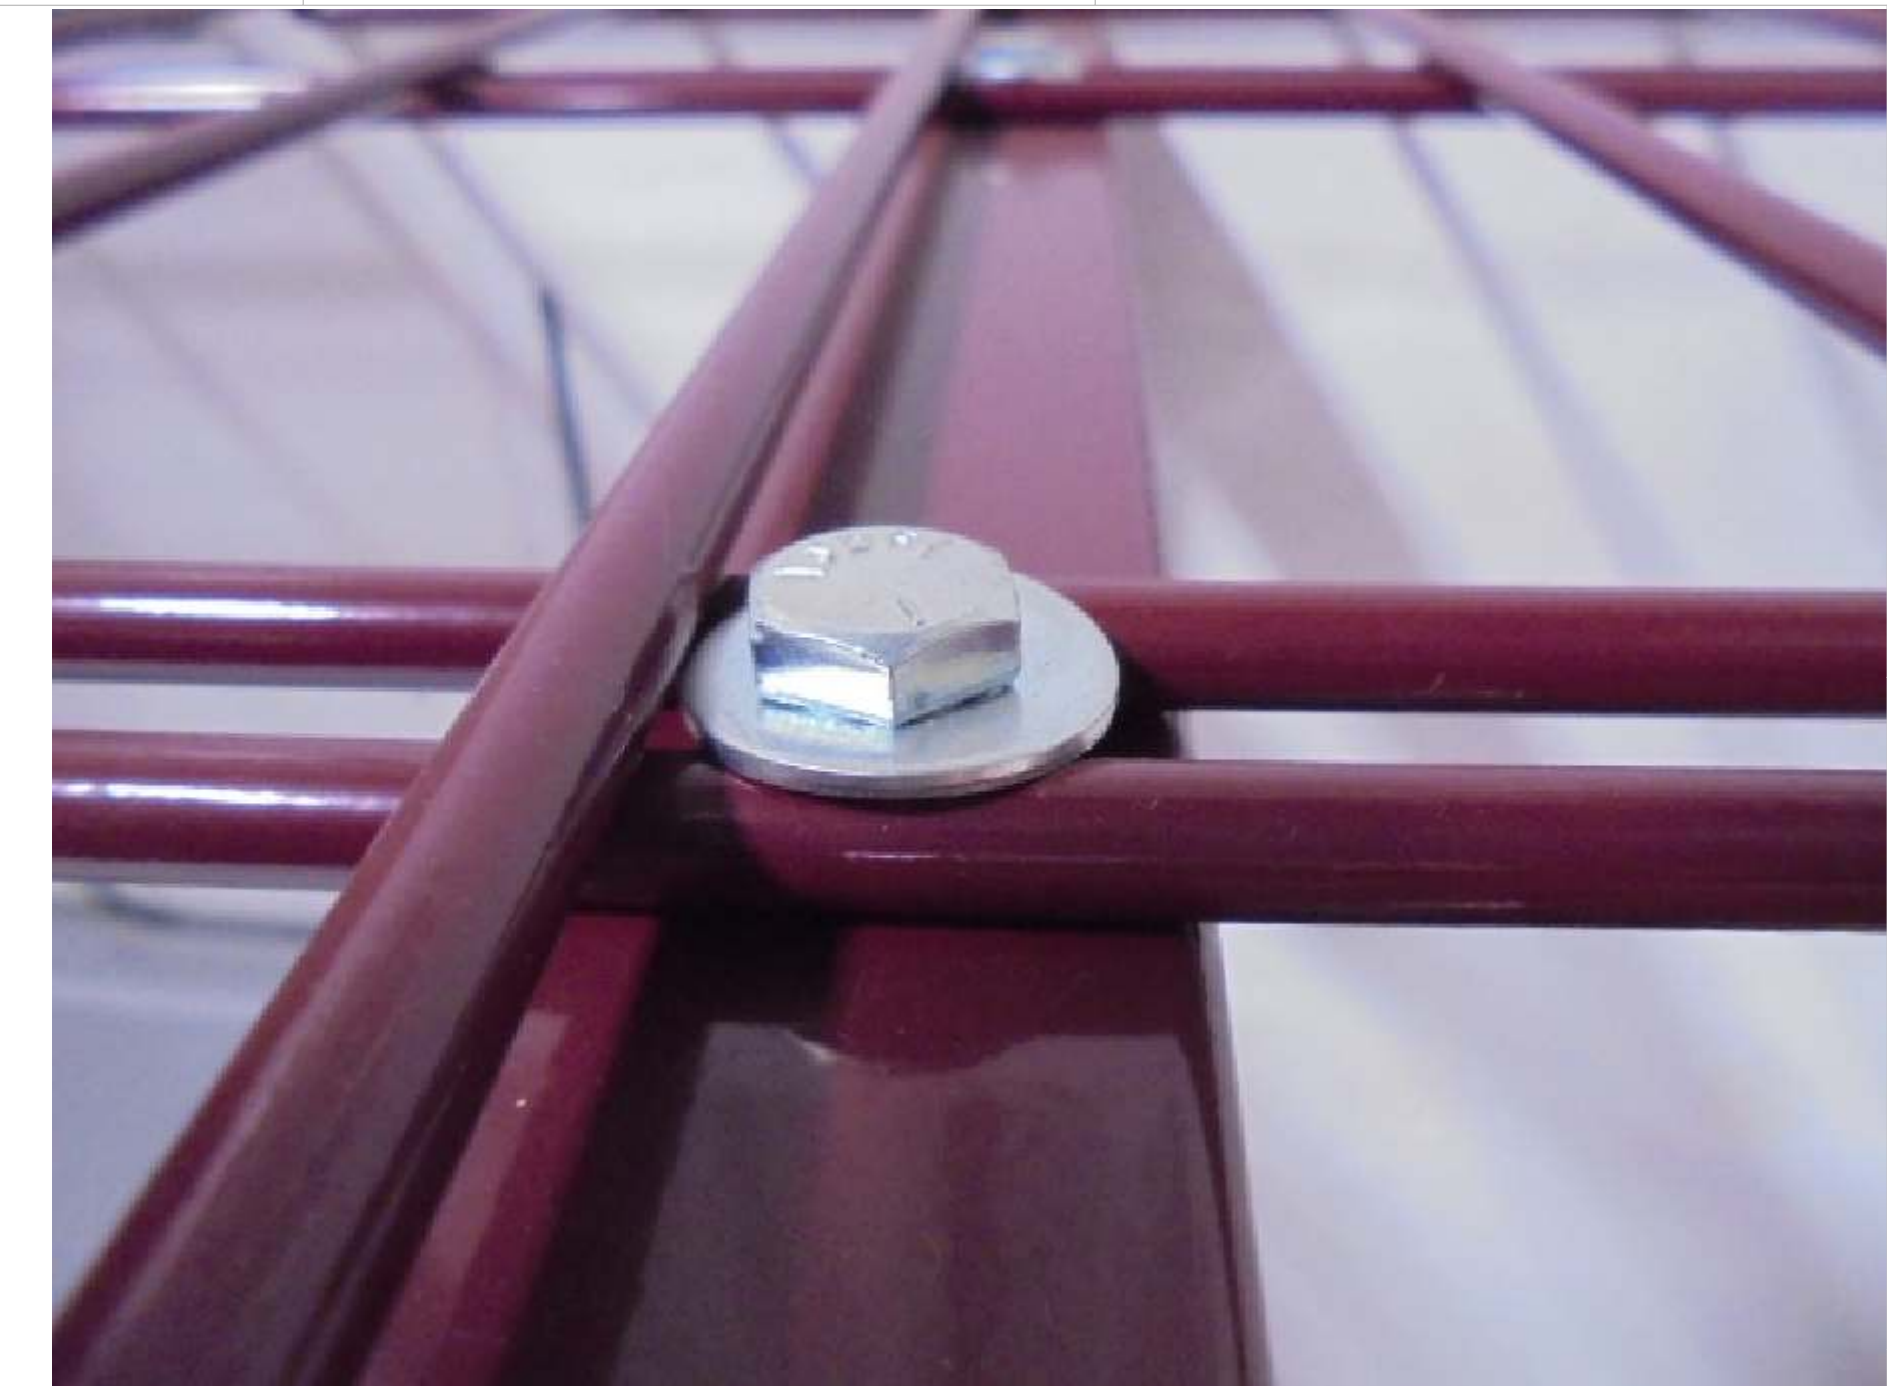

STEP 3:

IMAGE SHOWS WASHER AND BOLT IN POSITION ON TOP. INSTALL HARWARE ON EACH BRACKET. USE WASHERS ON THE BOTTOM SIDE AND HAND START THE NUTS. ONCE SHELF IS POSITIONED THEN TIGHTEN HARDWARE.



STEP 4 (OPTIONAL HANGBAR):

IF HANGBAR WAS ORDERED WITH SHELF THE TWO HOLES SHOWN ABOVE LOCATED ON THE SHELF BRACKETS WILL BE USED FOR THE HANGBAR BRACKET.



STEP 5 (OPTIONAL HANGBAR):

PLACE HANGBAR IN HANGBAR BRACKETS AND USE THE SELF DRILLING SCREWS TO MOUNT TO THE SHELF BRACKETS.

GEARGRID PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF GEARGRID CORPORATION. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF GEARGRID CORPORATION IS PROHIBITED.	DRAWN	NAME	DATE	TITLE:
	ENGINEER	LUKE B.	07-09-2020	WALL MOUNT STORAGE SHELVES, 4'-6'
INTERPRET DIM AND TOLERANCE PER ASME Y14.5M-1994	UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES TOLERANCES: ANGLE MACHINED ±.5° ANGLE FORMED ±1° TWO PLACE .XX THREE PLACE .XXX HOLE Ø ±.010 MATERIAL ±.005			SIZE
THIRD ANGLE PROJECTION	FINISH			PART NO.
				REV 01
				DO NOT SCALE DRAWING SHEET 1 OF 1